INSTALLATION INSTRUCTIONS LiveLED 12/35 Power Supply & Controller





MODEL NUMBER LL-12/35-CNTRL

Table of Contents

| - | |
|---|--|
| | |
| | |
| | |

| 1.0 | Important Safety Information | 3 |
|------|---|----|
| 2.0 | Placement & Mounting Requirements | 4 |
| 3.0 | General Operating Instructions | 5 |
| 4.0 | Stand Alone Control | 6 |
| 5.0 | Standard Operation | 6 |
| 6.0 | Preset Program Table | 6 |
| 7.0 | Quick Settings of Preset Colors & Effects | 7 |
| 8.0 | Resetting the DMX Programs | 8 |
| 9.0 | Troubleshooting | 9 |
| 10.0 |) Warranty | 10 |

1.0 Important Safety Information

IMPORTANT SAFETY INSTRUCTIONS

READ & FOLLOW ALL INSTRUCTIONS

 
- SAVE THESE INSTRUCTIONS.
- WARNING: RISK OF INJURY.
- WARNING: RISK OF ELECTRIC SHOCK.
- CAUTION: CONNECT ONLY WITH DESIGNATED CABLING AND TO THE DESIGNATED ALS PROPRIETORY CONTROLLER. FOR HELP IN DETERMINING A PROPER COMPLETE SYSTEM OR IF YOU HAVE ANY CONCERNS OR QUESTIONS DURING YOUR INSTALLATION YOU SHOULD CONTACT SV LIGHTING OR YOUR AGENT.




2.0 Placement & Mounting Requirements

The LiveLED[™] 12/35 Power Supply & Controller is designed to operate indoors (dry locations only). Mounting of this unit consits of mounting the controller on a flat surface securing at least two corners to a stud or adequate structural support using the mounting hardware supplied.

3.0 General Operating Instructions



LL12-3

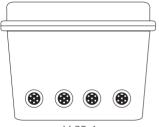


LL35-4

LiveLED[™] 12 Controller


The LiveLED 12 Controller has a 1, 3, 6, 9, & 12 fixture option. The only time 1 fixture by itself will operate is with a LL12-1 Controller. Any other options (LL12-3, LL12-6, LL12-9 or LL12-12) you must have the corresponding groups of three fixtures all connected. *The LL12-3 has a single Driver for all three Fixtures. The LL12-6 has two individual Drivers for each group of three Fixtures. The LL12-9 has three drivers, one for each group of three and the LL12-12 has four drivers one for each group of three.*

LiveLED[™] 35 Controller

 The LiveLED 35 can be operated in conjunction with 1-4 Fixtures. When ordering your controller you would need to specify LL35-1, LL35-2, LL35-3 or LL35-4. Each individual Fixture has its own Driver circuit.




LL12-1/LL35-1

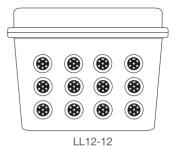

4.0 Stand Alone Control

- Program Code Example: 620 RGB 30s Crossfade
- Red LED indicator light (located below left knob) = DMX system has power
- Steady green LED indicator light (located below right knob) = System has digital signal
- Flashing green LED indicator light = Operation is being executed

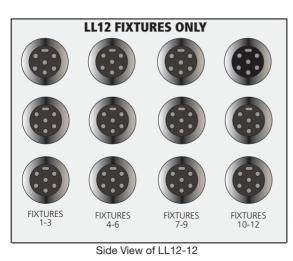

Drivers for LL12 fixtures in the LiveLED 12 Controller awre wire in a series of three, therefore all three fixtures need to be connected to utilize the driver.



Drivers for LL35 fixtures in the LiveLED 35 Controller are capable of running on LL35 fixture each.

Side View of LL35-4

5.0 Standard Operation

To operate the LiveLED[™] 12/35 Power Supply & Controller connect LL12/LL35 fixtures to the controller and rotate the control knobs within the panel of the controller (see picture above) to activate the preset program desired (see page 5). Be sure that if you are operating a LL12 Controller that you have three fixtures connected to each driver to ensure that the product will work. It is vital that in any outdoor installation that the controller is adequately covered and enclosed so that no moisture will enter.

6.0 Preset Program Table

STATIC COLORS:

| 601 | RED |
|-----|-------------------|
| 602 | BLUE |
| 603 | GREEN |
| 604 | MAGENTA |
| 605 | YELLOW |
| 606 | CYAN |
| 607 | WARM WHITE |
| 608 | COOL WHITE |
| 609 | BLUE MAGENTA |
| 610 | RED MAGENTA |
| 611 | TURQUOISE |
| 612 | ORANGE |
| 613 | LIGHT BLUE strobe |
| 614 | LIGHT YELLOW |
| 615 | LIGHT WARM PINK |
| 616 | LIGHT GREEN |
| 617 | LIGHT SALMON |
| 618 | LIGHT AMBER |
| 619 | LIGHT LAVENDER |
| | |

COLOR FADES:

| 620 | Red/Blue/Green |
|-----|--------------------|
| 621 | Red/Blue/Green |
| 622 | Red/Blue/Green |
| 623 | Red/Blue/Green |
| 624 | Red/Blue/Green |
| 625 | Red/Blue/Green |
| 630 | Red/Magenta/Yellow |
| 631 | Red/Magenta/Yellow |
| 632 | Red/Magenta/Yellow |
| 633 | Red/Magenta/Yellow |
| 634 | Red/Magenta/Yellow |
| 635 | Red/Magenta/Yellow |

COLOR SNAP CHANGE:

(white/salmon/red/blue/green/magenta/yellow/cyan)

| 640 | 8 Color snap change w/10 second pause |
|-----|---------------------------------------|
|-----|---------------------------------------|

641 8 Color snap change w/5 second pause

- 642 8 Color snap change w/2 second pause
- 643 8 Color snap change w/1 second pause
- 644 8 Color snap change w/0.5 second pause
- 645 8 Color snap change w/0.25 second pause

COLOR STROBE:

(flash on/off & pause for time indicated)

- 650 Red strobe 0.5 second strobe
- 651 Red strobe 0.25 second strobe
- 652 Red strobe 0.1 second
- 660 Blue strobe 0.5 second strobe
- 661 Blue strobe 0.25 second strobe
- 662 Blue strobe 0.1 second strobe
- 670 Green strobe 0.5 second strobe
- 671 Green strobe 0.25 second strobe
- Green strobe 0.1 second strobe
- 680 Cool White 0.5 second strobe
- 681 Cool White 0.25 second strobe
- 682 Cool White 0.1 second strobe

| 30 second cross fade |
|----------------------|
| 20 second cross fade |
| 15 second cross fade |
| 10 second cross fade |
| 5 second cross fade |
| 1 second cross fade |
| 30 second cross fade |
| 20 second cross fade |
| 15 second cross fade |
| 10 second cross fade |
| 5 second cross fade |
| 1 second cross fade |

6

7.0 Quick Settings of Preset Colors & Effects

| Channel: | Color Crossfades: | DMX Value (Min): | DMX Value (Max): |
|--|--|--|---|
| 1 2 3 4 4 4 4 4 4 4 4 4 4 | Red Green Blue No Action Magenta Yellow Cyan Warm White Cool White Cool White S5 Blue Magenta Red Magenta Turquoise Orange Light Blue Light Yellow Light Yellow Light Yellow Light Yellow Light Green Light Green Light Salmon Light Amber Light Lavender RGB: 30 Crossfade RGB: 15 Crossfade RGB: 10 Crossfade RGB: 05 Crossfade RGB: 01 Crossfade | 0 0 0 11 22 33 44 66 77 88 99 110 121 132 143 154 165 176 187 198 209 220 231 242 | 255 255 255 10 21 32 43 54 65 76 87 98 109 120 131 142 153 164 175 186 197 208 219 230 241 252 |
| 5 5 5 5 5 | No Action RMY: 30 Crossfade RMY: 20 Crossfade RMY: 15 Crossfade RMY: 10 Crossfade RMY: 05 Crossfade | 0 10 20 30 40 50 | 9 19 29 39 49 59 |
| 5 | RMY: 01 Crossfade | 60 | 69 |
| <u>Snap To Color (Whi</u> | te/Salmon/Red/Blue/Green/I | <u> Magenta/Yellow/Cyan)</u> | |
| 5 5 5 5 5 5 | 8 Color: 10 Snap 8 Color: 05 Snap 8 Color: 02 Snap 8 Color: 01 Snap 8 Color: 0.5 Snap 8 Color: 0.25 Snap | 70 80 90 100 110 120 | 79 89 99 109 119 129 |
| <u>Snap To Color (Whi</u> | te/Salmon/Red/Blue/Green/I | <u> Magenta/Yellow/Cyan)</u> | |
| 5 5 5 5 5 5 5 | 8 Color: 10 Snap 8 Color: 05 Snap 8 Color: 02 Snap 8 Color: 01 Snap 8 Color: 0.5 Snap 8 Color: 0.25 Snap | 70 80 90 100 110 120 | 79 89 99 109 119 129 |

7.0 Quick Settings of Preset Colors & Effects (Cont.)

Strobe: (Flash on/off & pause for time indicated)

| 5 | Red Strobe: 0.5 | 130 | 139 |
|---|-------------------------|-----|-----|
| 5 | Red Strobe: 0.25 | 140 | 149 |
| 5 | Red Strobe: 0.1 | 150 | 159 |
| 5 | Blue Strobe: 0.5 | 160 | 169 |
| 5 | Blue Strobe: 0.25 | 170 | 179 |
| 5 | Blue Strobe: 0.1 | 180 | 189 |
| 5 | Green Strobe: 0.5 | 190 | 199 |
| 5 | Green Strobe: 0.25 | 200 | 209 |
| 5 | Green Strobe: 0.1 | 210 | 219 |
| 5 | Cool White Strobe: 0.5 | 220 | 229 |
| 5 | Cool White Strobe: 0.25 | 230 | 239 |
| 5 | Cool White Strobe: 0.1 | 240 | 249 |

The DMX program allows a DMX controller to have complete control of color and effects. For custom cues, the programmer may use channels 1 through 5.

If DMX controlled pre-programmed sequences is required, the programmer should use a cue loop to send regular updates of the DMX values to the other unit(s). This will insure that all addressed SAVI™ Flare luminaires remain in sync with each other.

8.0 Resetting the DMX Programs:

Set the adjustment knob to a value of: 000 and disconnect the power (or turn the fixtures off). The fixtures will then reset themselves.

9.0 Troubleshooting

| Symptom: | Probable Cause: | Suggested Remedy: |
|-----------------------|-------------------------|--------------------------------|
| Unit does not light | No power to unit | Check power supply & cord |
| | Line voltage is <90 VAC | Use @ rated voltage |
| | Power supply failure | Contact Authorized Distributor |
| | Driver failure | Contact Authorized Distributor |
| One color won't light | Damaged driver | Contact Authorized Distributor |
| | LED board short | Contact Authorized Distributor |
| Low performance | Dirty Lens | Clean lens w/ soft dry cloth |
| | Damaged lens | Contact Authorized Distributor |
| | Damaged sub-optic board | Contact Authorized Distributor |
| No DMX response | Bad cable connection | Check cables |
| | DMX driver malfunction | Contact Authorized Distributor |
| | Address issues | Check for proper DMX address |

For additional assistance or questions contact an authorized distributor or dealer for Advanced Lighting Systems, Inc. or contact the factory at:

Advanced Lighting Systems, Inc. 519 Lincoln Road Sauk Centre, MN 56378 Tel: 320.352.0088 Fax: 320.352.0089

9

LIMITED WARRANTY

Nexus Lighting, Inc. warranties its products, excluding lamps, to be free from defects in material and/ or workmanship, under normal condition, use and service, for a period of two (2) years from the original invoice date (Five (5) Years for Red, Amber and Orange FlexLED and Border Light LED products and one (1) Year for Non-UL Listed Power Supplies). If proof of purchase is provided, Nexus Lighting will warranty the product for two (2) years from date of the purchase (Five (5) Years for Red, Amber and Orange FlexLED and Border Light products and one (1) Year for Non-UL Listed Power Supplies).

TERMS AND CONDITIONS:

This warranty only applies when Nexxus Lighting products are properly wired and installed together as a system; and operated within the electrical values shown on the Nexxus Lighting specification sheets; used in lighting equipment designed and approved for the application and environmental conditions (temperature, humidity) within the normal specified operating range of the system. This warranty does not apply to any abnormal use in violation of any applicable standard, code or instructions for use in installations including those contained in the latest National Electrical Code (NEC), the Standards for Safety of Underwriters Laboratory, Inc. (UL), Standards for the American National Standards Institute (ANSI), in Canada, the Canadian Standards Association (CSA), Europe (CE), Australia (C-Tick). This warranty will not apply in the event of conditions demonstrating abnormal use or stress, including under/over voltage conditions, excessive switching cycles, excessive operating hours, alterations, accident, theft, misuse, abuse and damaged caused by negligent installation, improper maintenance or where Lighting components with any other manufacturer will void the entire warranty.

WARRANTY SERVICE CLAIMS:

Nexxus Lighting must issue a Return Material Authorization (RMA) number for all requests for warranty review. To expedite service, please contact Nexxus Lighting Customer Representative: 407-857-9900. If you are unsure whether a situation exists that is covered by this warranty, please contact Nexxus Lighting Customer Service for assistance. In the event of a defect in material or workmanship during the warranty period, Nexxus Lighting will repair or replace (at its own discretion) its products under the conditions of the warranty.

RETURN OF DEFECTIVE PRODUCT:

After contacting Nexus Lighting, Inc. and receiving the RMA#, the purchaser / user shall promptly return the product after receiving instructions regarding if, when and where to ship product. Product must be returned within 30 days of receiving RMA#, Shipping box must be clearly marked with RMA#. Failure to follow this procedure shall void this warranty. Nexus Lighting will cover expenses for material but will not cover shipping costs. Products returned without an RMA# will be refused and returned to sender at the senders expense.

REPLACEMENT OF PRODUCT, LIMITS OF LIABILITY:

The foregoing shall constitute the exclusive remedy of the purchaser and the sole liability of Nexxus Lighting, Inc. regarding its products and component warranty. NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS MADE OR IS TO BE IMPLIED. In no event shall Nexxus Lighting, Inc. be liable for any other costs or damages including labor charges, lost profits or revenues, incidental, special or consequential damages. Total liability shall not exceed the total extended purchase price for the product. Nexxus Lighting, Inc. reserves the right to examine all failed Nexxus Lighting, Inc. products and components to determine the cause of failure and patterns of usage and reserves the right to be the sole judge as to whether any product or component is defective and covered under this warranty.

