

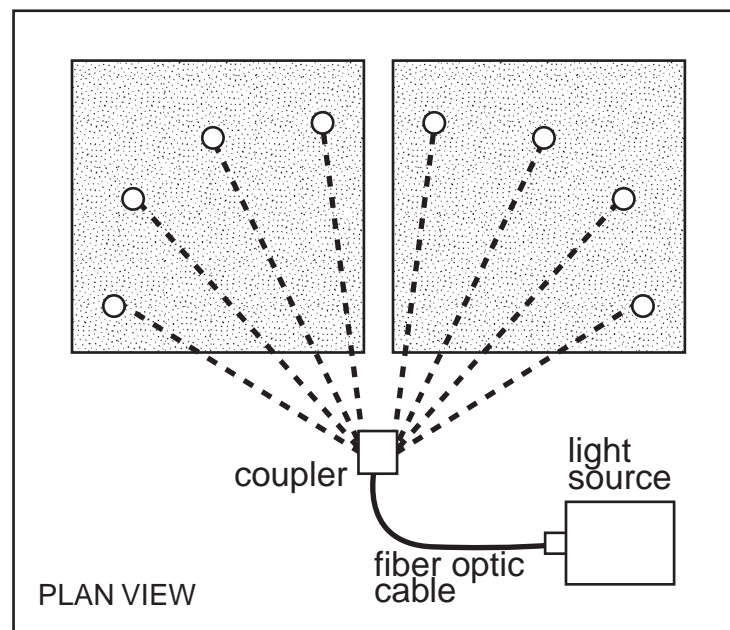
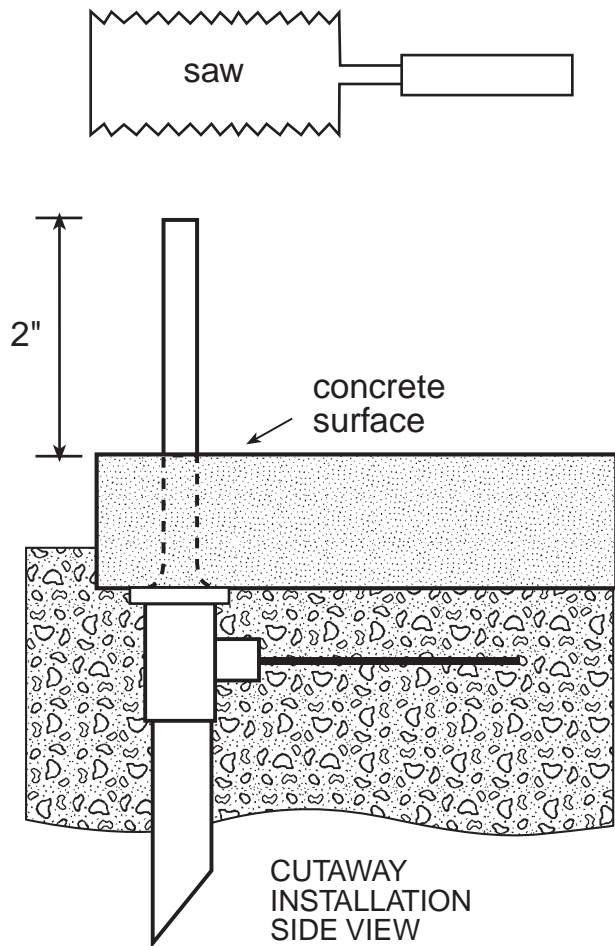
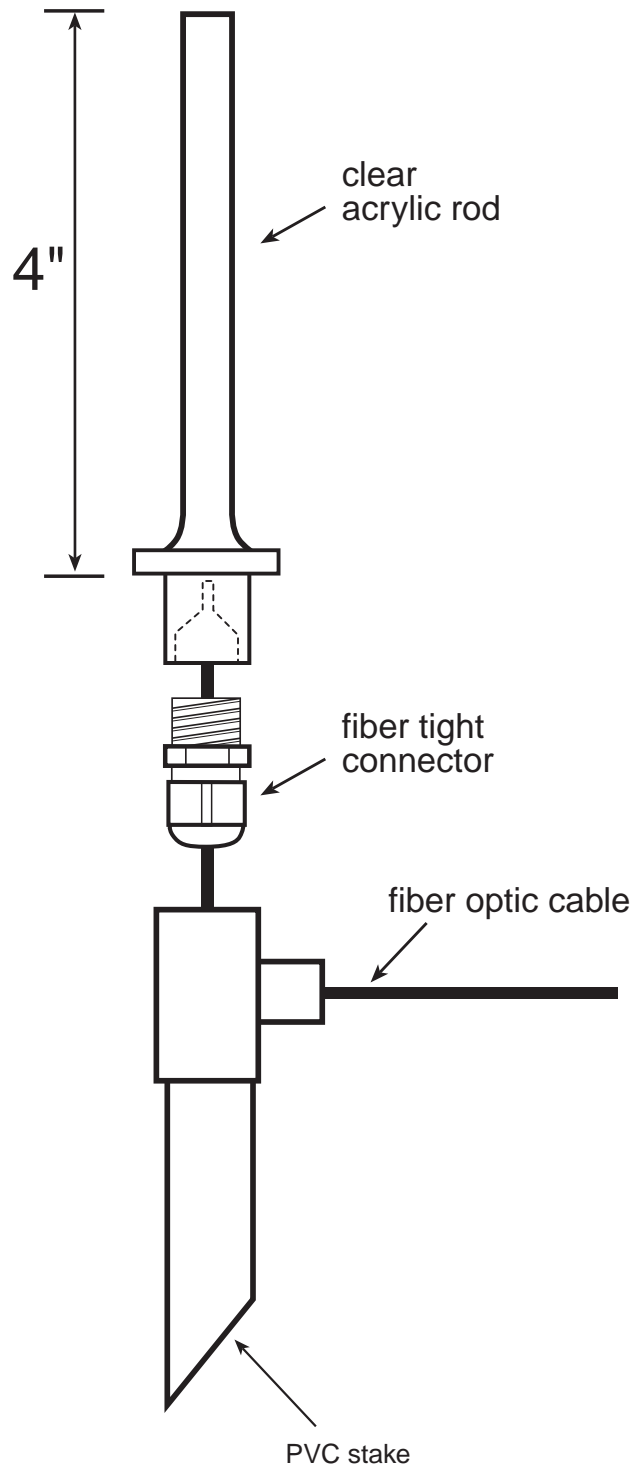



8210 Presidents Drive  
Orlando, FL 32809 USA  
Tel 407.857.9900  
Fax 407.857.0050  
www.svision.com

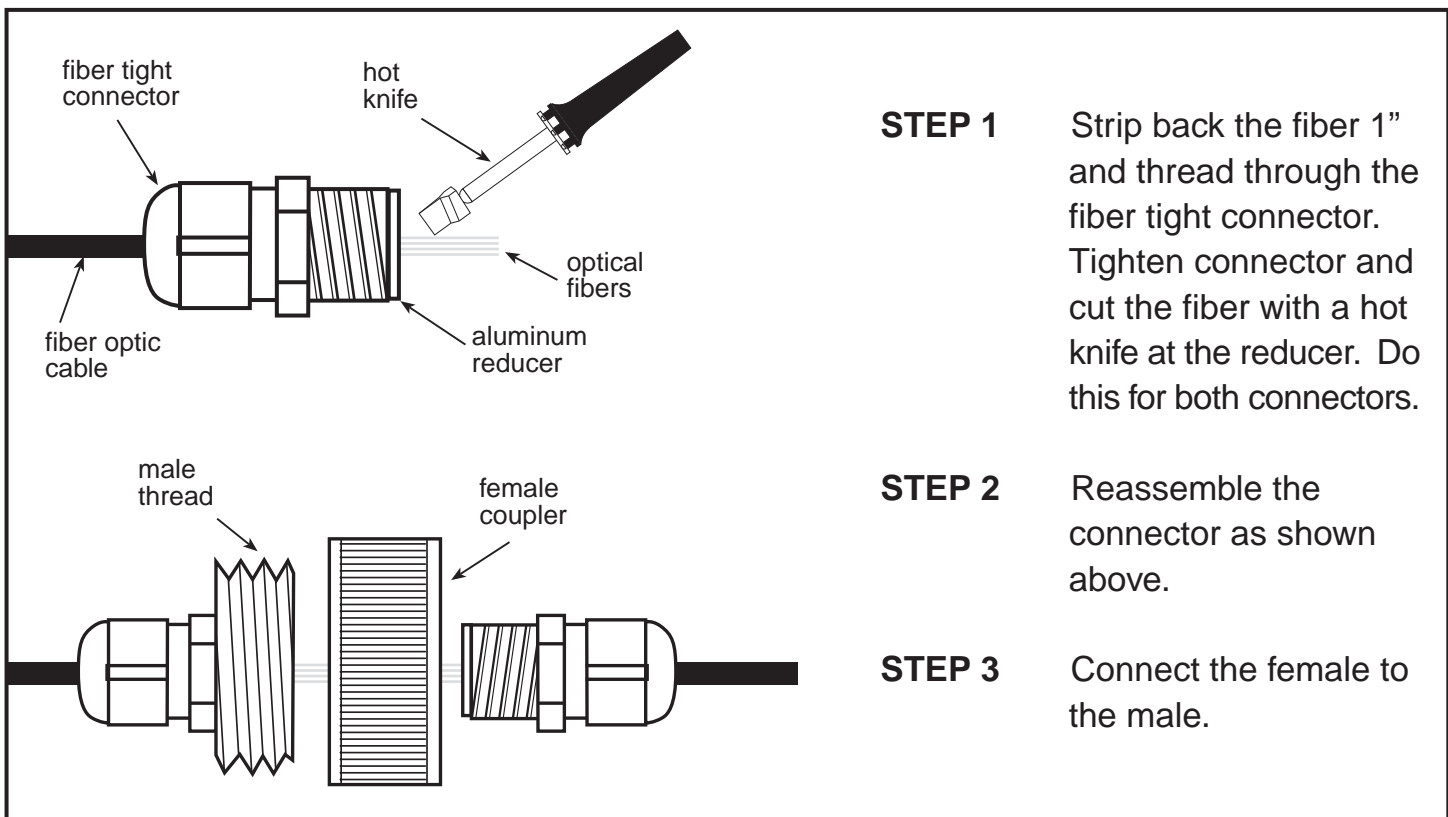

8210 Presidents Drive  
Orlando, FL 32809 USA  
Tel 407.857.9900  
Fax 407.857.0050  
www.svision.com

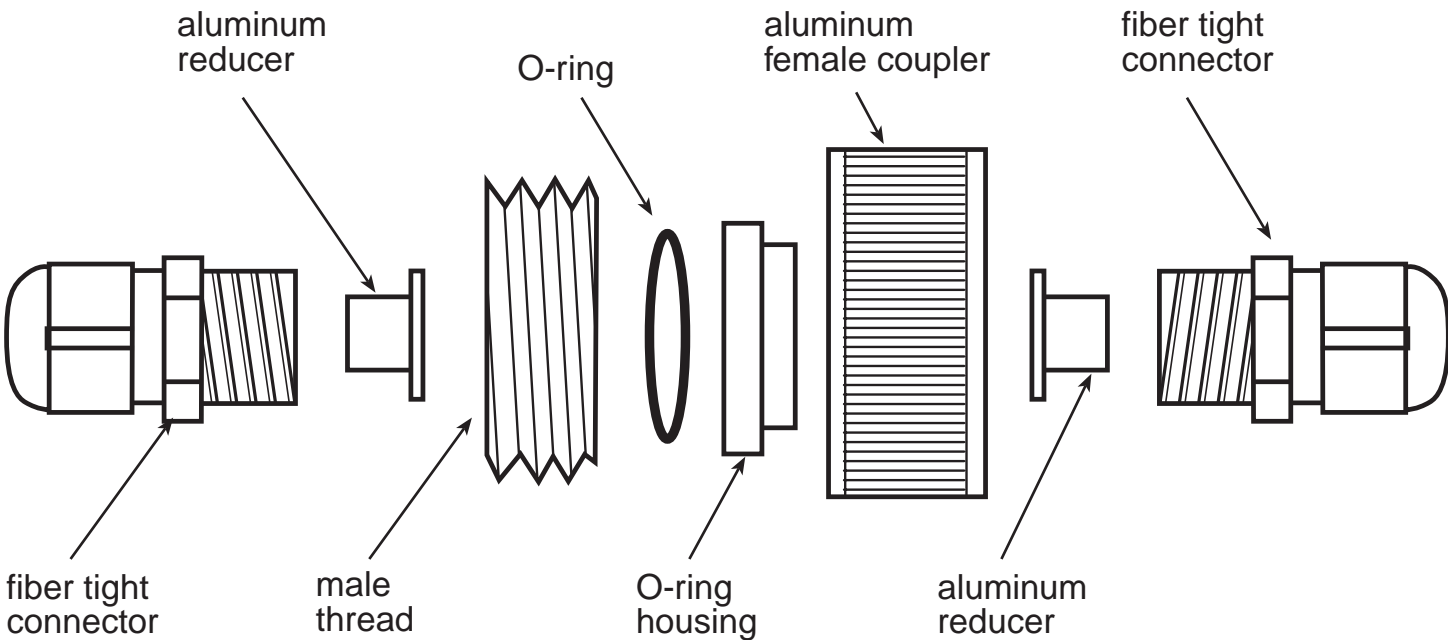


8210 Presidents Drive  
Orlando, FL 32809 USA  
Tel 407.857.9900  
Fax 407.857.0050  
www.svision.com

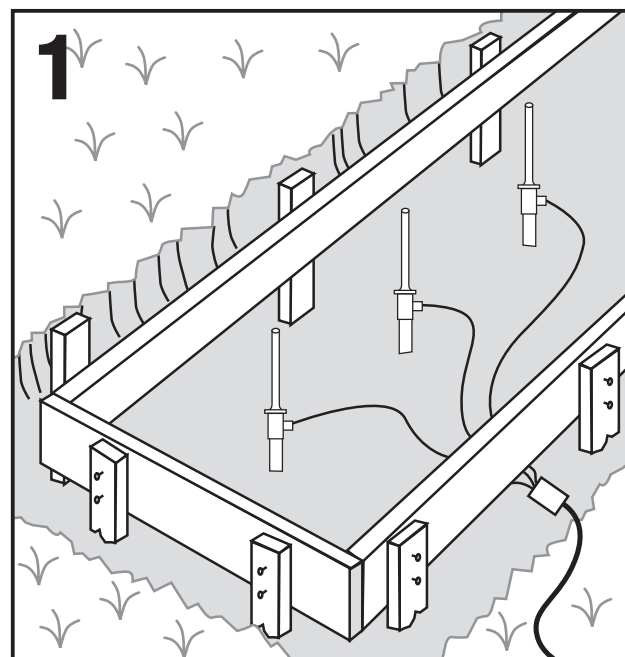


1

**STEP 1:** Place light sticks firmly into the ground with the fiber optics attached and the coupler assembled. The top of the light stick should extend 2" above the final concrete grade.

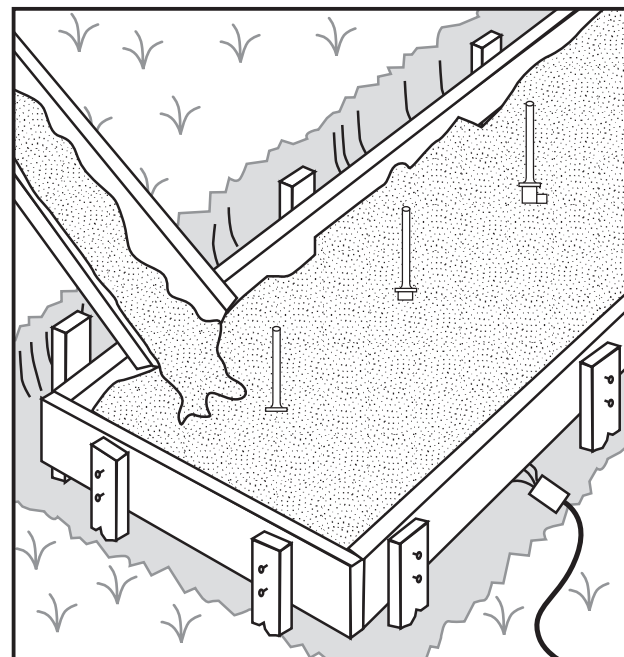


**STEP 2:** Pour the concrete.

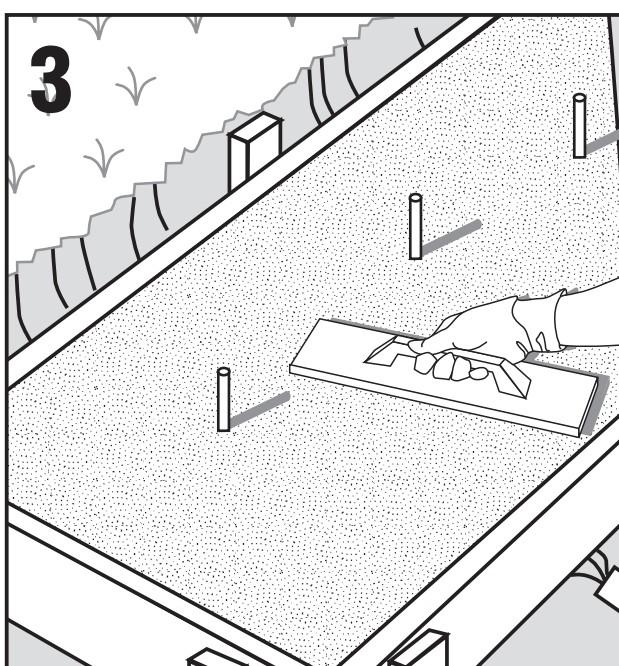

3

**STEP 3:** Finish the concrete.

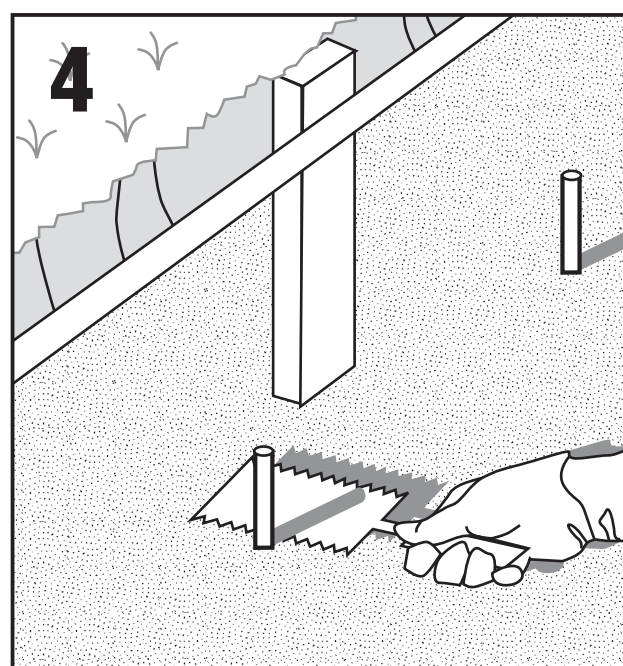

4

**STEP 4:** When the concrete has set, cut the light stick flush at the concrete surface with a saw or a grinder. Use a sander to produce a smooth finish on the light stick.